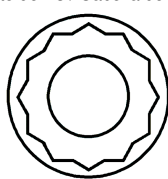
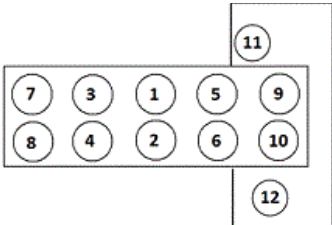


Anziehvorschrift für Zylinderkopf		744.472	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse		Opel / Vauxhall	
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
659.500 M 12x1,75x196,6			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ *	Position 1-10: 50 Nm Position 1-10: 90° Position 1-10: 90° Position 1-10: 90° Position 11-12: 20 Nm ➤ Position 11-12: 45°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 1,25 mm, Ø 81 mm			
Mot.: B16 DTE/DTH/DTL			
Astra, Insignia, Meriva B, Zafira C, Mokka			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*744.472*	