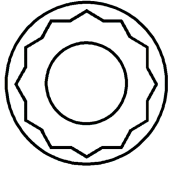
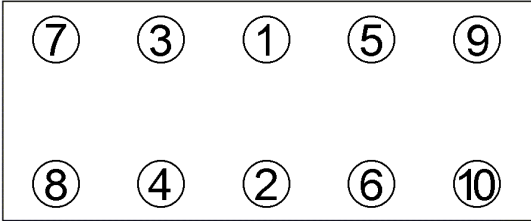


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		818.276 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 710.080 M 10				
Anziehen/ Tightening/ Serrage/ Apriete	E 13 * 39 - 44 Nm 69 - 74 Nm ★ 15 min 69 - 74 Nm	E 13 S, E 15 S * E 16, E 16 i 29 Nm 69 Nm □ 29 Nm 69 - 74 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 77,5 mm Mot: E13, E15S, E16i, E16S 1,3 ltr.-1,6 ltr. 44-77 kW (60-105 PS) Cherry, Prairie, Sunny I-II				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*818.276*		