



Tightening torque

Stage 1 = 60 Nm

Stage 2 = 180 Nm



Use a torque spanner to ensure that the specified torques are accurately maintained.