



Tightening torque

Stage 1 = 70 Nm

Stage 2 = 260 Nm



Use a torque spanner to ensure that the specified torques are accurately maintained.