



## Tightening torques of spring clamps

Use a torque spanner to check that the spring clamp fits tightly. Tighten the nuts to the specified tightening torque, alternating between nuts several times:

### 760 Nm

---

**Please check tightening torques every six months!**



Use a torque spanner to ensure that the specified torques are accurately maintained.