



Tightening torques of air spring bellows mounts

Top mount / M12
Tightening torque 40 Nm

Bottom mount / M16
Tightening torque 180 Nm

Please check tightening torques regularly!



Use a torque spanner to ensure that the specified torques are accurately maintained.