



INSTALLATION MANUAL

C-2745

Arnott Coil Spring Conversion Kit w/EBM
Jaguar XJ Series (X350/X358)



Engineered to Ride, Built to Last®

CONGRATULATIONS ON YOUR PURCHASE OF AN ARNOTT® SUSPENSION PRODUCT

WE AT ARNOTT LLC ARE PROUD TO OFFER A HIGH QUALITY PRODUCT WITH ALL THE TECHNICAL SUPPORT YOU NEED. THANK YOU FOR YOUR CONFIDENCE IN US AND OUR PRODUCT.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified and certified automotive professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

GENERAL INFORMATION

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at www.arnottinc.com and www.arnotteurope.com.



WARNING:

The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

- Not to be stored below 5°F (-15°C) and above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION:

Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.

To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.

Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

For vehicles with a "Closed Air Supply System," replacement of components requires proper adherence to procedures set forth within OE servicing literature. Failure to comply with the OE prescribed procedures can result in component damage and/or failure.

FRONT AIR STRUT REMOVAL

1. Raise vehicle.
2. Remove front wheels.
3. Remove the sway bar end link nut to disconnect it from the lower control arm. (Figure 1)



FIGURE 1

4. Remove the upper a-arm ball joint nut and separate the upper A-arm ball joint. (Figure 2)

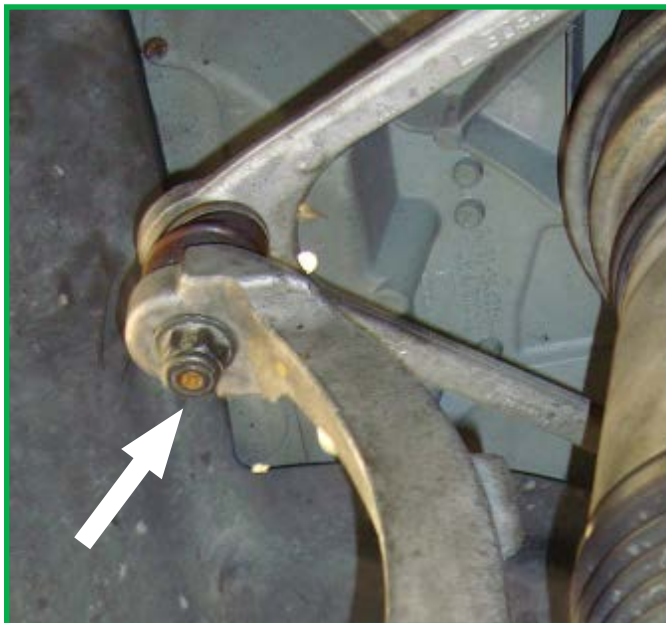


FIGURE 2

5. Remove the lower shock mount nut/bolt. (Figure 3)



FIGURE 3

6. Disconnect the electrical connector from the top of the shock (push on the sides of the connector to release). **Tie off wires not needed with coil conversion.** (Figure 4)

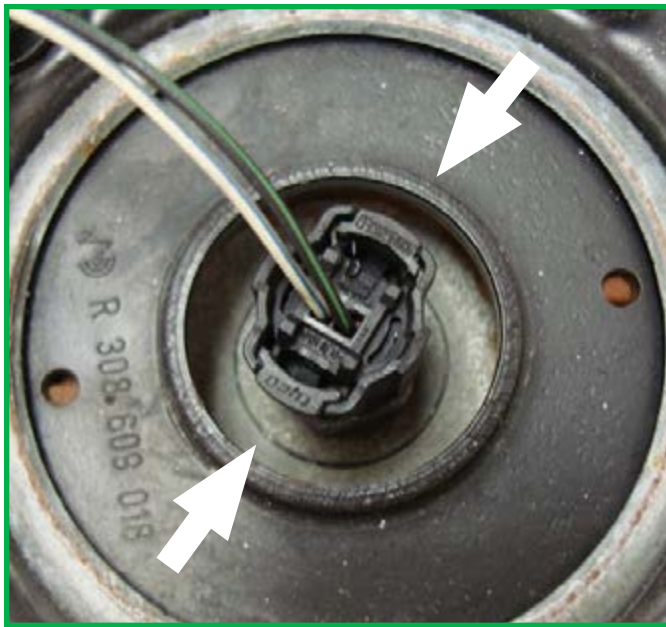


FIGURE 4

7. Disconnect the air line from the check valve and the four (4) shock mounting nuts. Tuck unused airline into suitable location (away from moving parts and sources of heat). (Figure 5)

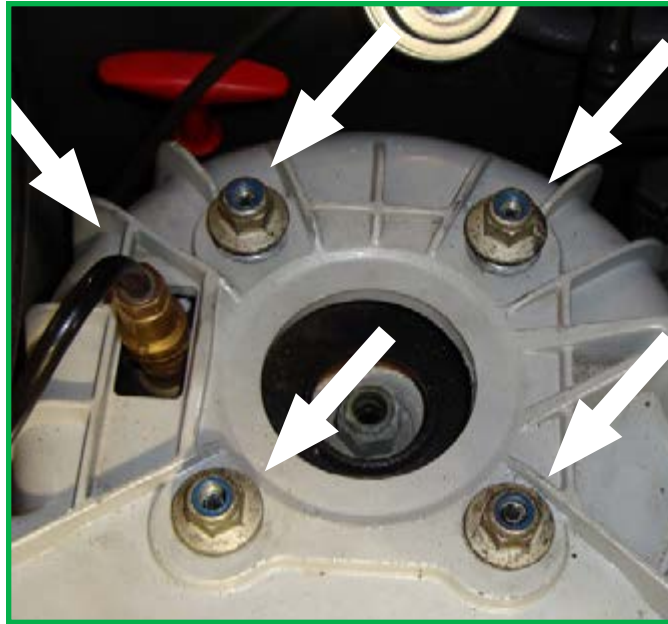


FIGURE 5

8. Remove air strut.

FRONT COIL SPRING INSTALLATION



WARNING:

Tighten all nuts and bolts to manufacturer's specifications during the installation process.

1. Place coil spring onto vehicle. (Figure 6)



FIGURE 6

2. Install bottom mounting bolt. (Figure 7)

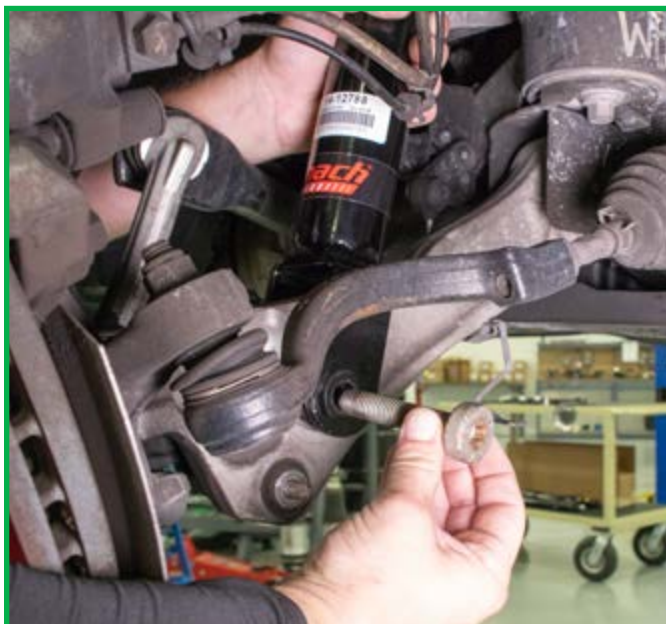


FIGURE 7

3. Attach the upper A-arm ball joint and install the nut. (Figures 8, 9)



FIGURE 8



FIGURE 9

4. Install sway bar end link bolt and nut. (Figures 10, 11)



FIGURE 10



FIGURE 11

5. Install top mounting nuts. (Figure 12)

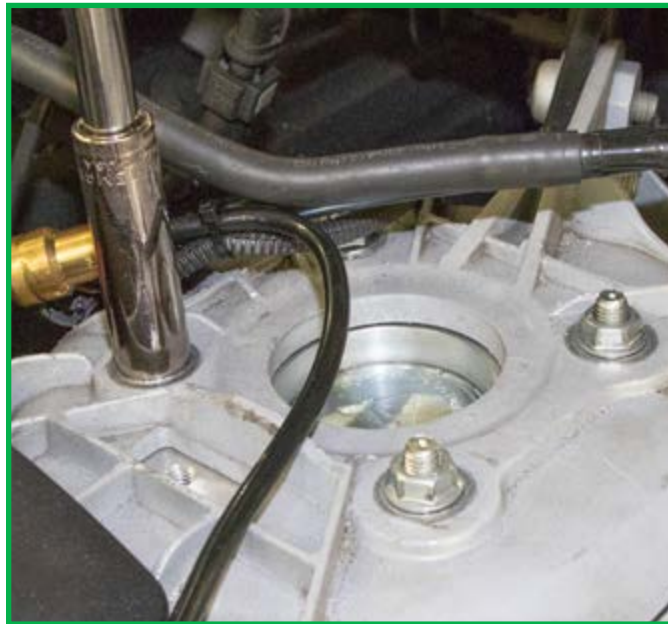


FIGURE 12

REAR AIR STRUT REMOVAL

1. Remove rear wheels.

NOTE: With vehicle properly lifted, shift the car into neutral to release tension on the rear suspension prior to disassembly.

2. Remove the luggage compartment side trim to expose the top side of the air strut. (Figure 13)



FIGURE 13

3. Disconnect the air line from the check valve. (Figure 14)



FIGURE 14

4. Disconnect the electrical connector from the top of the air strut (push on the sides of the connector to release). (Figure 15)

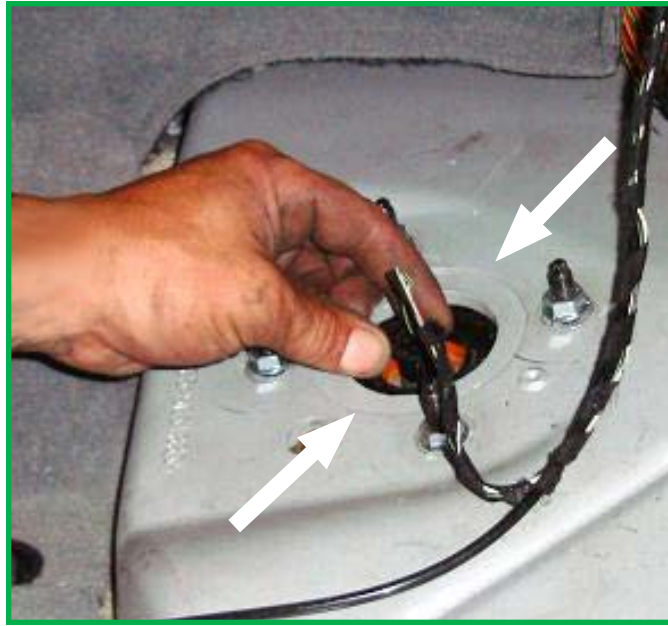


FIGURE 15

5. Remove the four (4) air strut mounting nuts. (Figure 16)

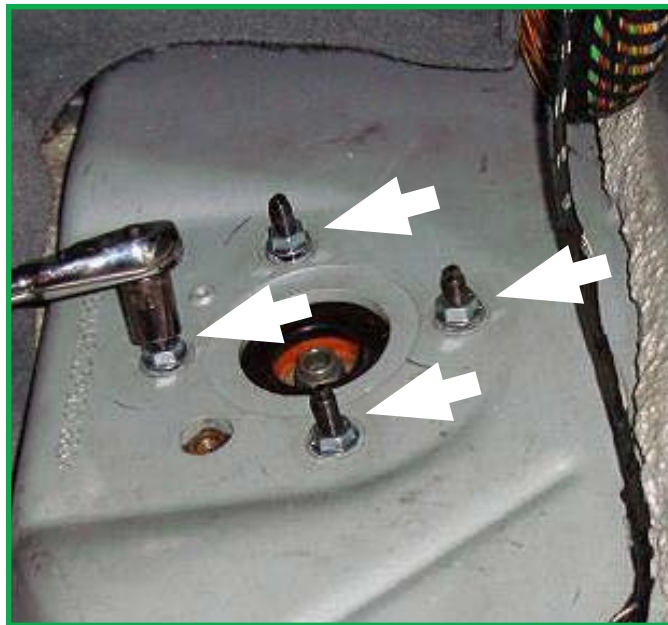


FIGURE 16

6. Detach the rear tie rod. (Figure 17)

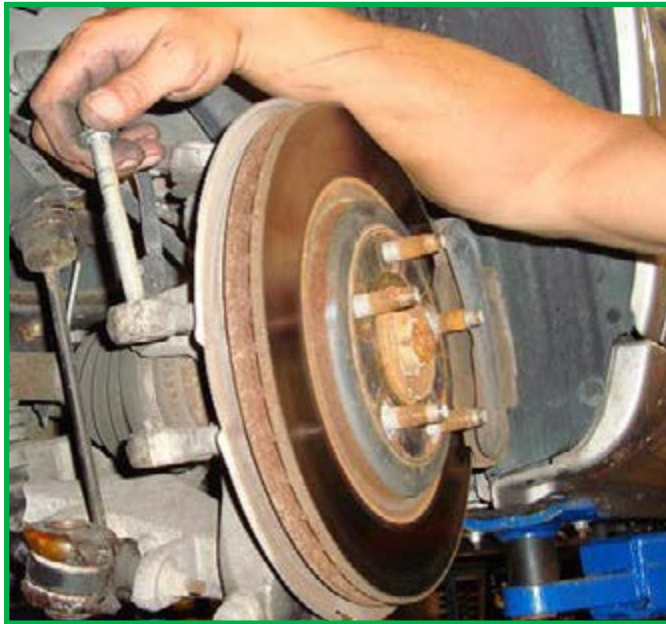


FIGURE 17

7. Remove the lower air strut mounting bolt. (Figure 18)

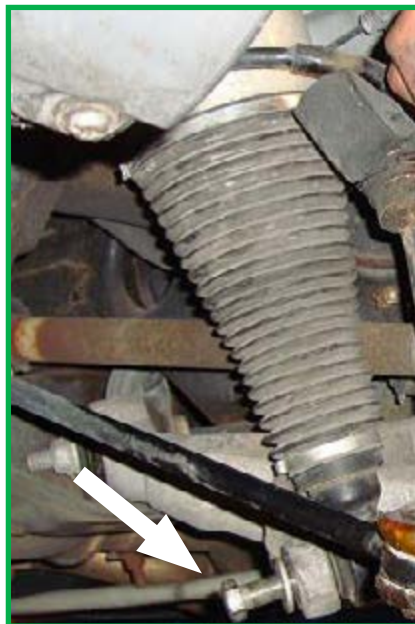


FIGURE 18

8. Remove air strut. (Figure 19)



FIGURE 19

REAR COIL SPRING INSTALLATION



WARNING:

Tighten all nuts and bolts to manufacturer's specifications during the installation process.

1. Install rear coil spring on vehicle. (Figure 20)



FIGURE 20

2. Install lower strut mounting bolt. (Figure 21)



FIGURE 21

3. Install tie rod bolt and tighten nut. (Figures 22, 23)



FIGURE 22



FIGURE 23

4. Tighten top mount nuts. (Figure 24)



FIGURE 24

ELECTRONIC BYPASS MODULE (EBM) INSTALLATION

1. Remove rear seat by pulling levers under cushion, 2 per side and lifting seat. (Figure 25)



FIGURE 25

2. Pull cord to release seat back while rotating top of seat forward, both sides. (Figure 26)



FIGURE 26

3. Pull insulation forward on right side of vehicle to access computer. (Figure 27)



FIGURE 27

4. Unplug all connectors from the control module. (Figure 28)

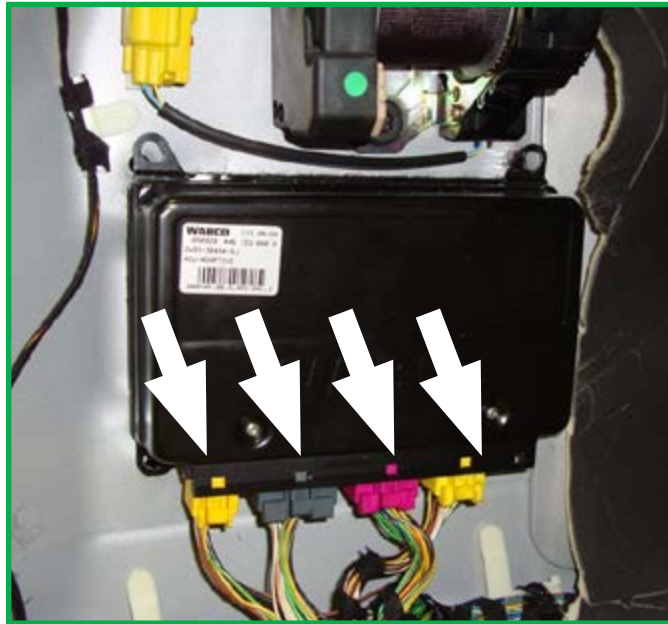


FIGURE 28

5. Locate the yellow, 6-pin connector with 5 wires terminated. (Figure 29)

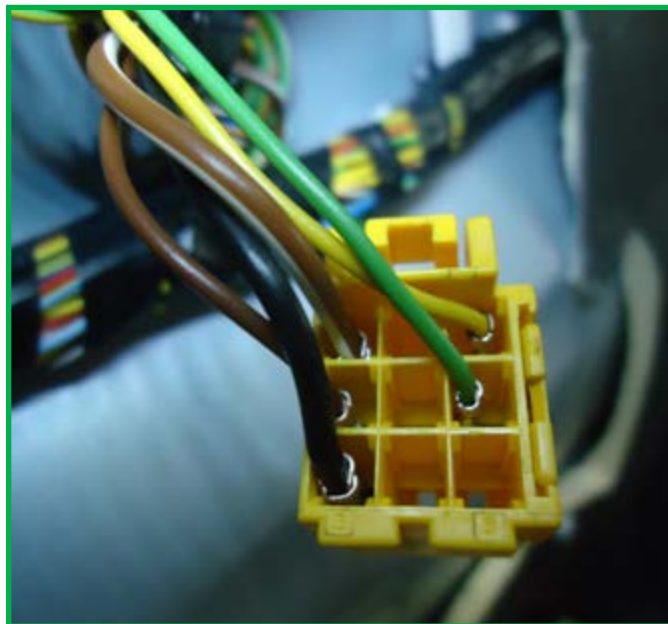


FIGURE 29

6. According to the table below, splice the EBM harness wires to the applicable vehicle control module harness wires using the four (4) supplied heat-shrink butt connectors. (Figures 30, 31)

	FROM	TO	PIN#	
ELECTRONIC BYPASS MODULE	Red	Brown	2	VEHICLE'S WIRING HARNESS
	Black	Black	3	
	Blue	Yellow	7	
	Green	Green	8	

FIGURE 30


HEAT-SHRINK BUTT CONNECTOR INSTALLATION



BEFORE CUTTING


Verify you are working with the correct wires. Check the manufacturer’s wiring diagram for your specific vehicle.

NOTE: Make all new connections to the **HARNESS SIDE**, not the connector side.

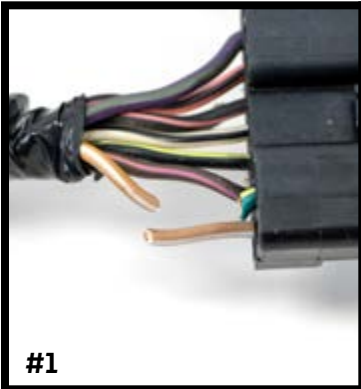

#1

IDENTIFY AND CUT THE APPLICABLE WIRE TO THE CONTROL MODULE.

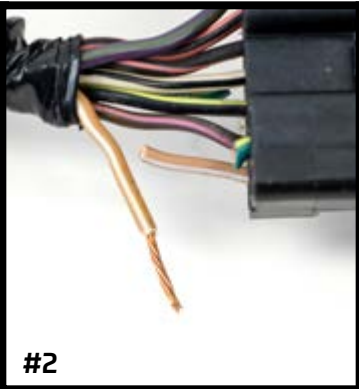

#2

STRIP 10MM OF INSULATION WITH A SUITABLE TOOL. TWIST EXPOSED WIRE.



#3

INSERT THE WIRE INTO THE BUTT CONNECTOR AND CRIMP ACCORDING TO THE TABLE ABOVE.



#4

USE AN APPROPRIATE TOOL TO HEAT SHRINK.

FIGURE 31

NOTE: Do not plug the vehicle’s wiring harness back into the suspension’s control module. It remains unplugged.

7. Secure the EBM and vehicle's wiring harness in a suitable location. Do not plug the vehicles wiring harness back into the air suspension's control module.
8. Reinstall the seat.
9. EBM installation complete.



HOW HELPFUL WAS THIS MANUAL?

Scan the QR code or click the link below to let us know.

<https://bit.ly/44hmqU8>

NEED IMMEDIATE SUPPORT?

We're happy to help! Reach out using the contact information listed.

Arnott®

Suspension Products

Arnott US Business Office:

www.arnottsuspension.com

100 Sea Ray Drive
Merritt Island, FL 32953

Call: 800.251.8993
321.868.3016

Fax: 321.868.3703

Email: techassistance@arnottinc.com

Arnott Europe Business Office:

www.arnotteurope.com

Industrieweg 19
5145 PD, Waalwijk (NL)

NL Phone: +31 73 7850 580

DE Phone: +31 85 2087 438


UK Phone: +44 203 3186 124

BE Phone: +32 258 846 90


ES Phone: +34 91 901 10 56

FR Phone: +32 78 48 46 93


Email: info@arnotteurope.com

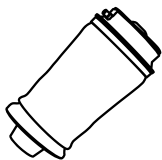


Air Springs

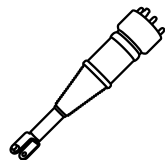


Struts

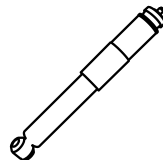


Shocks

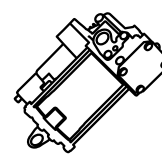


Compressors

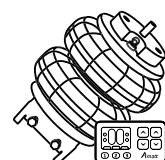


LCV Air Helper
Spring Kits

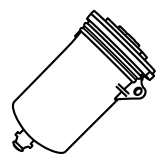


Dryers

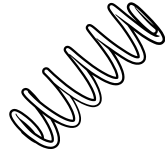


Coil Spring
Conversion Kits

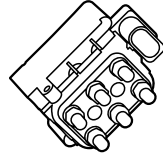

Valve Blocks

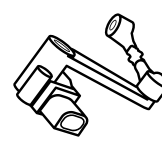

Ride Height
Sensors

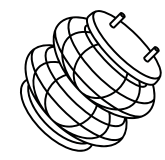

Pickup Truck Air
Helper Springs