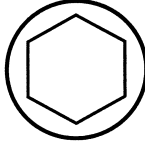
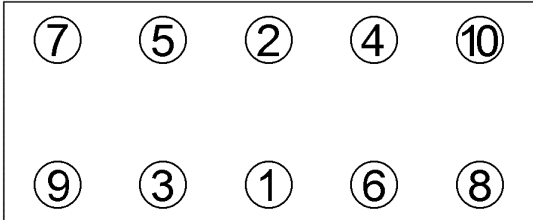


Anziehvorschrift für Zylinderkopf		764.133		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Mitsubishi / Hyundai			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
709.170 M 10 x 100					
Anziehen/ Tightening/ Serrage/ Apriete		* 30 - 35 Nm 50 - 55 Nm 70 - 75 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
72,5 mm Ø					
Colt A151, A155 Mot.4G11, 4G16 1977>9/1986					
Colt C15A Mot.4G11, 4G16 1977>9/1986					
Lancer A171, C11A Mot.4G11, 4G16 1977>9/1986					
Mirage Mot.4G11, 4G16 1977>9/1986					
Colt C11, C51 Mot.4G13 8/1986>11/1989					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*764.133*		